


POWERTRAIN CONTROL MODULE

CONN #1

CONN #2

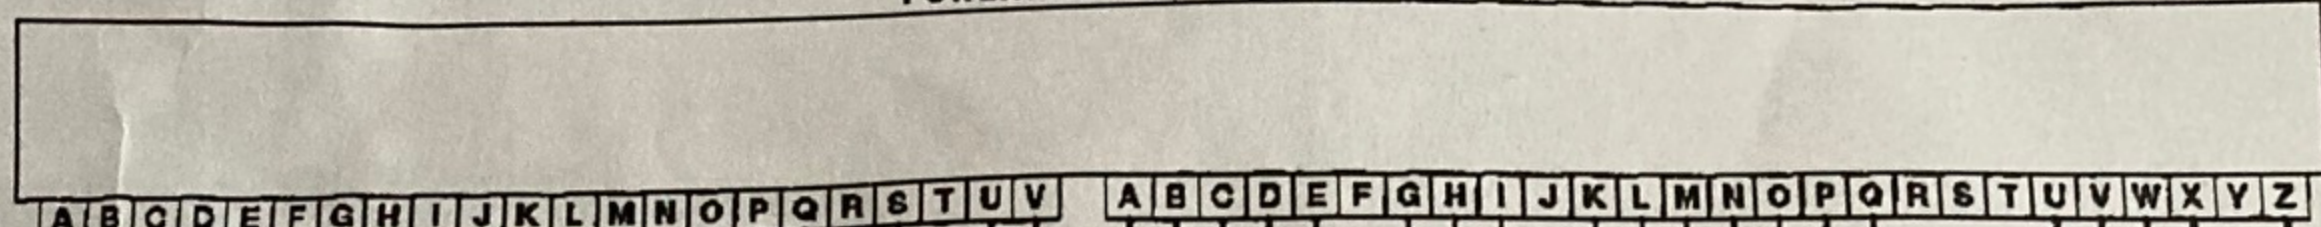


A

ROOM FUSE  
CHECK ENG IND (INST CLSTR)

LT GRN-YEL  
WHT-GRN  
WHT-YEL

STOP LT SW

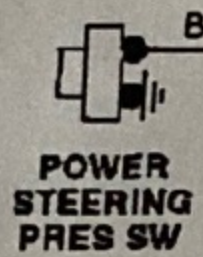

POWER STEERING PRES SW

BLK

WHT-RED  
GRN-ORG

HORN RELAY

BLK-GRN  
BLK

COOLING FAN RELAY

YEL-BLU

JOINT CONN #2 (AIR BAGS)

DIAG CONN

FUEL TANK UNIT

BLU-RED  
LT GRN  
WHT-RED

YEL-BLU TACHOMETER (INST CLSTR)

VIO  
BLK

IGNITION SW

ST SIG FUSE (RELAY & MAIN FUSE BLOCK)

CIRCUIT OPENING RELAY

- A WHT
- B BRN-YEL
- C BLU
- D YEL-BLU
- E BLK-WHT
- F BLK
- G BRN
- H RED

CONN #1  
A BLU-RED  
B WHT-RED  
C VIO  
D WHT-GRN  
E YEL-BLK  
F WHT-YEL  
G BRN-YEL  
H BRN  
I BLU-BLK  
J LT GRN-YEL  
K RED  
L GRN  
M BLU-YEL  
N LT GRN-BLK  
O BLK-GRN  
P B.U-ORG  
Q RED-BLK  
R BRN-WHT (OR BLK-BLU)

CONN #2  
A BLK  
B BLK  
C BLK-LT GRN  
D BLK-LT GRN  
E WHT  
F YEL-BLU  
G RED-WHT  
H BLK-WHT  
I LT GRN-RED  
J LT GRN-WHT  
K RED-BLK  
L RED-BLU  
M RED  
N RED-GRN  
O BLU-WHT  
P YEL  
Q YEL-BLK  
R BLU-ORG  
S YEL-RED  
T LT GRN

A/T CONTROL UNIT

(A/T)

PURGE SOL VALVE

IDLE SPEED CONTROL SOL VALVE

YEL-BLK 2

YEL-BLK 4

YEL 1

YEL 3

FUEL INJECTORS

O2 SENSOR

COOLANT THERMO SENSOR

- D LT GRN-RED
- F RED
- C BLK-LT GRN
- E BLK-LT GRN
- G RED-GRN
- A LT GRN
- B BLK

FUEL PUMP SW

AIRFLOW METER

LT GRN-RED  
RED-BLK

BLK-LT GRN  
RED

THROTTLE